
 

 



 

 








 





 

 

 
 





Original	Replacement
 Power	 Power
 DTV/ATV	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Aspect	 Zoom / Size

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 V+	 Vol+
 V-	 Vol-
 Mute	 Mute / Dimmer
 MTS	 Eject / Surround
 Timer	 Sleep / Timer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		Rec Menu D.Menu / Top
	Yellow Yellow / YouTube / Repeat		T-Shift Setup / OPT /
	Blue Blue / Prime Video / Random		Still Audio / Lang I/II
	<< << / Tune-		
	>> >> / Tune+		
	I<< I<< / Preset-		
	>>I >>I / Preset+		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	Stop Stop / Hold		
	TTX Text / Goto		
	Subtitle Subtitle / EQ		
	DTV/Radio/Repeat TV/Radio /		
	List Smart / List		
	FAV Fav / Marker / PC		
	EPG Guide / EPG / -/--		
	Rec Rec / Rec Mode		

