























 




















 



 





















Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 1	 1	 Blue	 Blue / Prime Video / Random
 2	 2	 P>P	 Fav / Marker / PC
 3	 3	 PP	 Back / Return
 4	 4	 [+]	 Info / Angle
 5	 5	 Mute	 Mute / Dimmer
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 OK
 AV	 AV / Input / RDS	 TXT	 Text / Goto
 TV	 TV/Radio /	 Time	 Shift + Sleep / Timer
 I/II	 Audio / Lang I/II	 [=i]	 Subtitle / EQ
 OO	 Smart / List	 [=+]	 Picture / Format
 Red	 Red / Netflix / Search	 [=x]	 Setup / OPT /
 Green	 Green / APP / Repeat	 [/ =]	 Display / Media





	Original	Replacement	Original	Replacement
	[=?]	 Guide / EPG / -/--		
	[=◆]	 Menu / Home		
	[=▲]	 CH+ / Page+		
	[=▼]	 CH- / Page-		
	Sleep	 Sleep / Timer		

