
 



 







 





 





 

 



 





 

 



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 USB	 Shift + 8
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Help	 Smart / List
 FAV	 Shift + Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Option	 Setup / OPT /
 Red	 Red / Netflix / Search
 TTX	 Text / Goto

Original	Replacement
 Green	 Green / APP / Repeat
 Sub	 Subtitle / EQ
 Yellow	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer
 Blue	 Blue / Prime Video / Random
 Timer	 Shift + Sleep / Timer
 Menu	 Menu / Home
 i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 EPG	 Guide / EPG / -/-





Original		Replacement		Original	Replacement
	CH+		CH+ / Page+		
	Vol-		Vol-		
	List		Shift + Smart / List		
	CH-		CH- / Page-		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Tv/Radio		TV/Radio /		
	0		0		
	Recall		Fav / Marker / PC		

