





 

 

 


 
 

 

 

















 



 







 

 

 

 

 





 

 







Original	Replacement	Original	Replacement
 Power	 Power	 I<<	 I<< / Preset-
 DVD	 Shift + 2	 Stop	 Stop / Hold
 Tuner Band	 Shift + 6	 Play / Pause	 Play / Slow
 Aux	 Shift + 7	 Play / Pause	 Pause / Step / Freeze
 Open / Close	 Eject / Surround	 >>I	 >>I / Preset+
 Title	 Shift + Sound / Title	 << / Tuning	 << / Tune-
 Menu	 Menu / Home	 >> / Tuning Up	 >> / Tune+
 TV / Video	 AV / Input / RDS	 Up	 Up
 TV Power	 Shift + Power	 Left	 Left
 Audio Mo/St	 Audio / Lang /II	 Enter	 OK
 Subtitle	 Subtitle / EQ	 Right	 Right
 TV Channel -	 Shift + CH- /	 Down	 Down
 TV Channel +	 Shift + CH+ /	 Volume -	 Vol-
 Display	 Display / Media	 Volume +	 Vol+
 Return	 Back / Return	 DSP/PLII Mode	 CH+ / Page+
 TV Volume -	 Shift + Vol-	 DSP/PLII Effect	 CH- / Page-
 TV Volume +	 Shift + Vol+	 Mute	 Mute / Dimmer





Original	Replacement
Sleep	Sleep / Timer
1 / RDS Display	1
2	2
3 / TA	3
Sound Edit	Sound / Title
4 / PTY -	4
5 / PTY Search	5
6 / PTY +	6
SPK Mode	Smart / List
7	7
8	8
9	9
Pro Logic II	Shift + Audio / Lang I/II
Slow	Shift + Play /
0	0
Setup	Setup / OPT /
Test Tone	Shift + Text / Goto

Goto

Original	Replacement
Angle	Info / Angle
Zoom	Zoom / Size
DRC	D.Menu / Top
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Program	TV/Radio /
Step	Shift + Pause / Step /
Go To	Text / Goto
Remain	Picture / Format

