


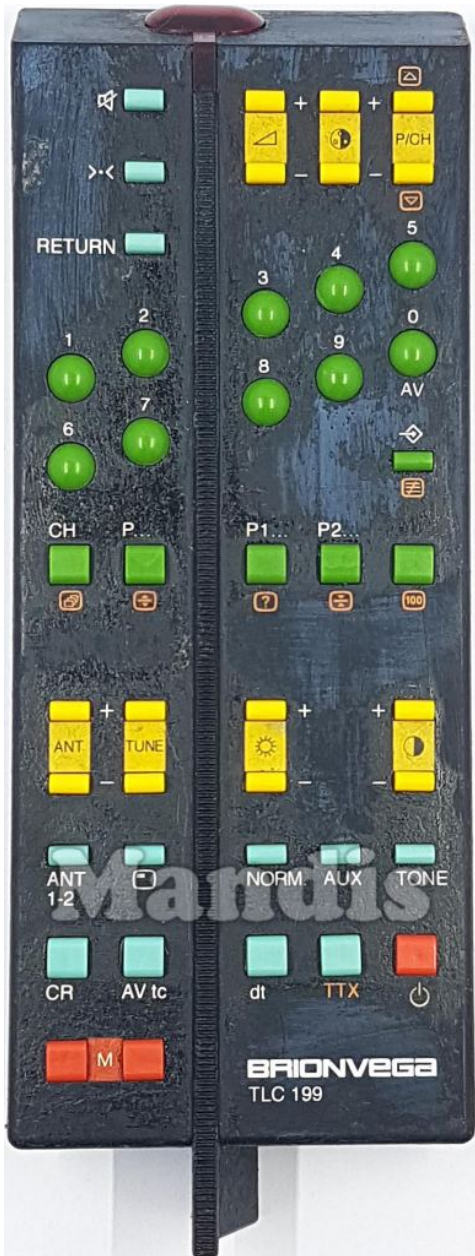

Original	Replacement	Original	Replacement
Mute	Mute / Dimmer	6	6
Vol+	Vol+	7	7
Color+	Right	Input/[=]	AV / Input / RDS
C/PH+	CH+ / Page+	CH/[]	Zoom / Size
><	Fav / Marker / PC	P/[]	TV/Radio /
Vol-	Vol-	P1/[?]	Audio / Lang I/II
Color-	Left	P2/[+]	Subtitle / EQ
C/PH-	CH- / Page-	100	Guide / EPG / -/-
Return	Back / Return	Ant+	>> / Tune+
4	4	Tune+	Shift + >> /
5	5	*+	Up
2	2	Contrast+	>> / Preset+
3	3	Ant-	<< / Tune-
0/AV	0	Tune-	Shift + << /
1	1	*-	Down
8	8	Contrast-	<< / Preset-
9	9	Ant 1-2	Red / Netflix / Search





Original	Replacement
Mute	Mute / Dimmer
Vol+	Vol+
Color+	Right
P/CH+	CH+ / Page+
><	Fav / Marker / PC
Vol-	Vol-
Color-	Left
P/CH-	CH- / Page-
Return	Back / Return
4	4
5	5
2	2
3	3
0/AV	0
1	1
8	8
9	9

Original	Replacement
6	6
7	7
Input/[=]	AV / Input / RDS
CH/[]	Zoom / Size
P/[]	TV/Radio /
P1/[?]	Audio / Lang I/II
P2/[+]	Subtitle / EQ
100	Guide / EPG / -/-
Ant+	>> / Tune+
Tune+	Shift + >> /
*+	Up
Contrast+	>> / Preset+
Ant-	<< / Tune-
Tune-	Shift + << /
*-	Down
Contrast-	<< / Preset-
Ant 1-2	Red / Netflix / Search





Original	Replacement
	Info / Angle
	Green / APP / Repeat
	+ Shift + 7
	Blue / Prime Video / Random
	Display / Media
	Yellow / YouTube / Repeat
	Smart / List
	Text / Goto
	Power
	Rec / Rec Mode

Original	Replacement

