



Original	Replacement
	Power
	Smart / List
	1
	2
	3
	AV / Input / RDS
	4
	5
	6
	OK
	7
	8
	9
	Mute / Dimmer
	0
	CH- / Page-
	CH+ / Page+

Original	Replacement
	Vol-
	Vol+
	Guide / EPG / -/-
	Fav / Marker / PC
	<< / Tune-
	>> / Tune+
	Menu / Home
	Setup / OPT /
	I<< / Preset-
	>>I / Preset+
	Text / Goto
	TV/Radio /
	Shift + 1
	Back / Return
	Sleep / Timer
	Shift + Text /
	Display / Media





Original

Replacement

	Red / Link 1		Red / Netflix / Search
	Green / Link 2		Green / APP / Repeat
	Yellow / Link 3		Yellow / YouTube / Repeat
	Blue / Link 4		Blue / Prime Video / Random

Original

Replacement

