



























































 











Original		Replacement		Original		Replacement	
	Power		Power		Angle/Audio		Audio / Lang I/II
	Open/Close		Eject / Surround		Angle/Audio		Info / Angle
	1		1		Prog/Repeat		Green / APP / Repeat
	2		2		Prog/Repeat		TV/Radio /
	3		3		Setup		Setup / OPT /
	4		4		Stop		Stop / Hold
	5		5		Play		Play / Slow
	6		6		Pause		Pause / Step / Freeze
	7		7		Left		Left
	8		8		Up		Up
	9		9		Right		Right
	Menu/Zoom		Zoom / Size		OK		OK
	Menu/Zoom		Menu / Home		Down		Down
	0		0		<<		<< / Tune-
	USB		Shift + 8		>>		>> / Tune+
	Title/Subtitle		Sound / Title		Vol+		Vol+
	Title/Subtitle		Subtitle / EQ		I<<		I<< / Preset-





	Original	Replacement	Original	Replacement
		>>		>>  / Preset+
		Vol-		Vol-
		Mute		Mute / Dimmer
		Goto		Text / Goto
		Display		Display / Media

