










 

 










 
 








 






























Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Input	 AV / Input / RDS	 Home	 Menu / Home
 1	 1	 P-	 CH- / Page-
 2	 2	 Guide	 Guide / EPG / -/--
 3	 3	 Up	 Up
 4	 4	 i	 Info / Angle
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Back	 Back / Return
 9	 9	 Down	 Down
 Lang	 Audio / Lang I/II	 Exit	 Exit / Cancel / Clear
 0	 0	 << / Tune-	 << / Tune-
 TXT	 Text / Goto	 Pause	 Pause / Step / Freeze
 Vol+	 Vol+	 >> / Tune+	 >> / Tune+
 Mute	 Mute / Dimmer	 Rec	 Rec / Rec Mode
 P+	 CH+ / Page+	 Play	 Play / Slow





Original	Replacement	Original	Replacement
			
Stop	Stop / Hold		
			
Red	Red / Netflix / Search		
			
Green	Green / APP / Repeat		
			
Yellow	Yellow / YouTube / Repeat		
			
Blue	Blue / Prime Video / Random		

