

















 







 





 









 



 

 

 

 

 

 

 



 

 









Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PR.List		Smart / List
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Pic Mode		Picture / Format
	S.Mode		Sound / Title

 

Original	Replacement	Original	Replacement
	CH+ / Page+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Zoom		Zoom / Size
	Sleep		Sleep / Timer
	DNR		Setup / OPT /
	MTS		D.Menu / Top
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Play/Pause / Size	 Play / Slow
 Play/Pause / Size	 Shift + Zoom /
 Play/Pause / Size	 Pause / Step / Freeze
 Stop / Reveal	 Stop / Hold
 EPG	 Guide / EPG / --
 Info	 Info / Angle
 I<< / Text	 Text / Goto
 I<< / Text	 I<< / Preset-
 >>I / Index	 >>I / Preset+
 << / Subpage	 << / Tune-
 >> / Hold	 Shift + Stop /

Hold

Original	Replacement
 >> / Hold	 >> / Tune+

