







Original	Replacement
	 Power
	 Rec / Rec Mode
	 Mute / Dimmer
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Pause / Step / Freeze
	 I<< / Preset-
	 Stop / Hold
	 >>I / Preset+
	 Sound / Title
	 Audio / Lang I/II
	 Subtitle / EQ
	 Eject / Surround
	 Picture / Format
	 Zoom / Size
	 Sleep / Timer

Original	Replacement
	 TV/Radio /
	 D.Menu / Top
	 Setup / OPT /

