 

 

 

 

 


 

 



 

 
 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 Rec	 Rec / Rec Mode
 Vol+	 Vol+
 Info	 Info / Angle
 CH+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Home	 Menu / Home
 CH-	 CH- / Page-
 ≡	 D.Menu / Top
 Input	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Smart Colors	 Display / Media
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Shift + Green / APP / Repeat





Original	Replacement	Original	Replacement
	Red Red / Netflix / Search		
	Green Green / APP / Repeat		
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	<< << / Tune-		
	>> >> / Tune+		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	Stop Stop / Hold		
	Subt Subtitle / EQ		
	Audio Audio / Lang I/II		
	TXT Text / Goto		

