





































| Original | Replacement | Original | Replacement |
|--|--|--|--|
|  Power |  Power |  10+ |  Guide / EPG / -/-- |
|  Mute |  Mute / Dimmer |  Zoom |  Zoom / Size |
|  EQ |  Subtitle / EQ |  Step (TV-Mode) |  Shift + Pause / Step / |
|  1 |  1 |  I<< |  I<< / Preset- |
|  2 |  2 |  >>I |  >>I / Preset+ |
|  3 |  3 |  Stop |  Stop / Hold |
|  OSD |  Display / Media |  Play |  Play / Slow |
|  4 |  4 |  Pause |  Pause / Step / Freeze |
|  5 |  5 |  << |  << / Tune- |
|  6 |  6 |  >> |  >> / Tune+ |
|  L/R |  Text / Goto |  Slow |  Shift + Play / |
|  7 |  7 |  Up |  Up |
|  8 |  8 |  Menu |  Menu / Home |
|  9 |  9 |  Left |  Left |
|  P/N |  Fav / Marker / PC |  Enter |  OK |
|  Repeat |  Green / APP / Repeat |  Right |  Right |
|  0/10 |  0 |  Return |  Back / Return |





| Original | Replacement | Original | Replacement |
|--|-------------|--|-----------------------------|
|  | Down |  | Down |
|  | Setup |  | Setup / OPT / |
|  | Reset |  | Exit / Cancel / Clear |
|  | Treb+ |  | CH+ / Page+ |
|  | Sub+ |  | Blue / Prime Video / Random |
|  | Vol+ |  | Vol+ |
|  | Input |  | AV / Input / RDS |
|  | Treb- |  | CH- / Page- |
|  | Sub- |  | Yellow / YouTube / Repeat |
|  | Vol- |  | Vol- |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

