

 

 

 

 

 

 

 

 

 











 



 



 



 


 
 



 



 



 













Original		Replacement		Original		Replacement	
	Power On		Power		4		4
	Power Off		Shift + Power		5		5
	Speakers 1		CH+ / Page+		6		6
	Speakers 2		CH- / Page-		7		7
	PHONO		Shift + 8		8		8
	CD		Shift + 3		9		9
	VID 1		Shift + 1		Direct		Guide / EPG / -/--
	VID 2		Shift + 2		0		0
	VID 3		Shift + 4		Clear		Exit / Cancel / Clear
	FM		Shift + 6		Memory		Fav / Marker / PC
	AM		Shift + 7		Up		Up
	TAPE MON		Shift + 5		Menu		Menu / Home
	FM Mode		Display / Media		Left		Left
	Auto Preset		Smart / List		OK		OK
	1		1		Right		Right
	2		2		Preset Scan		Info / Angle
	3		3		Down		Down





Original	Replacement	Original	Replacement
 Vol+	 Vol+		
 Mute	 Mute / Dimmer		
 Tune Up	 >> / Tune+		
 Vol-	 Vol-		
 Tune Down	 << / Tune-		
 Preset Down	 << / Preset-		
 Preset Up	 >> / Preset+		
 Dimmer	 Shift + Dimmer / Mute / Dimmer		
 Sleep	 Sleep / Timer		

