



 




 







 

 

















 



 

 





Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Audio / Lang I/II
	 Subtitle / EQ
	 Picture / Format
	 Text / Goto
	 Shift + Green / APP / APP /
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Info / Angle

Original	Replacement
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7





Original	Replacement	Original	Replacement
 8	 8		
 9	 9		
 [G]	 Guide / EPG / -/--		
 0	 0		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Home	 Shift + Menu /		
 Netflix	 Shift + Red / Netflix /		
 YouTube	 Shift + Yellow / YouTube /		
 prime video	 Shift + Blue / Prime		

