



 





 
 

 

 

 

 



 

 



 

 

 



 









 

 




 










Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV/Radio	 TV/Radio /
 0	 0
 EPG	 Guide / EPG / -/--
 Fav	 Fav / Marker / PC
 Menu	 Menu / Home
 Info	 Info / Angle

Original	Replacement
 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear
 SAT	 Shift + 0
 V-Mode	 Display / Media
 TV/AV	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Up / PR+	 CH+ / Page+
 Up / PR+	 Up
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK / List	 OK
 OK / List	 Smart / List
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Page-	 Shift + CH- /
 Down / PR-	 CH- / Page-
 Down / PR-	 Down





Original		Replacement		Original		Replacement	
	Page+		Shift + CH+ /				
	Red / Find		Red / Netflix / Search				
	Green / V-Format		Picture / Format				
	Green / V-Format		Green / APP / Repeat				
	Yellow / TXT		Text / Goto				
	Yellow / TXT		Yellow / YouTube / Repeat				
	Blue / Audio L/R		Audio / Lang I/II				
	Blue / Audio L/R		Blue / Prime Video / Random				
	Record		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				
	Shift		Eject / Surround				
	<< Fast		<< / Tune-				
	Fast >>		>> / Tune+				
	< Slow		I<< / Preset-				
	Slow >		>>I / Preset+				

