


































Original	Replacement	Original	Replacement
 Power	 Power	 <<	 << / Tune-
 Tv/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red	 Red / Netflix / Search	 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat	 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat	 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random	 >>I/Index	 >>I / Preset+
 P.Mode --	 Fav / Marker / PC	 Menu	 Menu / Home
 Text	 Text / Goto	 Up	 Up
 Hold	 Shift + Stop /	 Audio	 Audio / Lang I/II
 S.Mode --	 Guide / EPG / -/--	 Left	 Left
 Subtitle	 Subtitle / EQ	 OK	 OK
 Size	 Zoom / Size	 Right	 Right
 Aspect	 Shift + Picture / Format	 Sleep	 Sleep / Timer
 Subpage	 Eject / Surround	 Down	 Down
 Media	 Smart / List	 Exit	 Exit / Cancel / Clear
 Play / Pause	 Play / Slow	 Vol+	 Vol+
 Play / Pause	 Pause / Step / Freeze	 Mute	 Mute / Dimmer









 


































 









Original	Replacement
CH+ / Page+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH- / Page-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Shift + Guide / EPG / -/--	+ Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
Source	AV / Input / RDS

Original	Replacement
Smart TV	Picture / Format
Mouse	Sound / Title





Original	Replacement	Original	Replacement
 Power	 Power	 <<	 << / Tune-
 Tv/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red	 Red / Netflix / Search	 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat	 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat	 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random	 >>I/Index	 >>I / Preset+
 P.Mode	 Picture / Format	 Menu	 Menu / Home
 Text	 Text / Goto	 Up	 Up
 Hold	 Shift + Stop /	 Audio	 Audio / Lang I/II
 S.Mode	 Sound / Title	 Left	 Left
 Subtitle	 Subtitle / EQ	 OK	 OK
 Size	 Zoom / Size	 Right	 Right
 Aspect	 Shift + Picture / Format	 Sleep	 Sleep / Timer
 Subpage	 Eject / Surround	 Down	 Down
 Media	 Smart / List	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 Mute	 Mute / Dimmer





Original	Replacement
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
Source	AV / Input / RDS

Original	Replacement
FAV	Fav / Marker / PC
TVG	Guide / EPG / -/--

