



















 



















































Original	Replacement	Original	Replacement
 Marche	 Power	 Index-	 Down
 1	 1	 Index+	 Up
 2	 2	 Compt./Reste	 Fav / Marker / PC
 3	 3	 Annul.	 Exit / Cancel / Clear
 Prog+	 CH+ / Page+	 OSP	 Smart / List
 4	 4	 ENR.	 Rec / Rec Mode
 5	 5	 Auto	 Shift + Display / Media
 6	 6	 Play/Lect.	 Play / Slow
 Prog-	 CH- / Page-	 <</Ret.Rap.	 << / Tune-
 7	 7	 >>/AV.RAP.	 >> / Tune+
 8	 8	 I>/Ralenti	 Blue / Prime Video / Random
 9	 9	 Stop/Arret	 Stop / Hold
 →	 Right	 Pause/AR.Image	 Pause / Step / Freeze
 Source	 AV / Input / RDS	 SP/LP	 Picture / Format
 0	 0	 A.Select	 Red / Netflix / Search
 -/--	 Guide / EPG / -/--	 Disp.	 Display / Media
 ←	 Left	 Doub.Son	 Audio / Lang I/II





	Original	Replacement	Original	Replacement
MONIT.SAT.	Monit.Sat.	TV/Radio /		
CONT.SAT.	Cont.Sat.	Zoom / Size		
ShowView	ShowView	Setup / OPT /		
EJECT.	Eject	Eject / Surround		





Original	Replacement	Original	Replacement
Marche	Power	Index+	Up
1	1	Index-	Down
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
Source	AV / Input / RDS		
Entrer	OK		
Prog Tv+	CH+ / Page+		
Prog Tv-	CH- / Page-		
Vol+	Vol+		
Vol-	Vol-		

