





 





Original	Replacement
Power	Power
Direct Tv Rec	TV/Radio /
Tv Aspect	Zoom / Size
Tv/Text	Text / Goto
1	1
2	2
Tracking/V-Lock+	CH+ / Page+
3	3
4	4
5	5
6	6
Tracking/V-Lock-	CH- / Page-
7	7
8	8
9	9
Volume+	Vol+
AV/Input Select	AV / Input / RDS

Original	Replacement
0	0
-/--	Shift + Guide / EPG / -/--
Volume-	Vol-
Search	Red / Netflix / Search
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+
SV/V+	Picture / Format
Still Album	Setup / OPT /
Replay	Display / Media
Pause/Step	Pause / Step / Freeze
Rec	Rec / Rec Mode
Menu	Menu / Home
Play	Play / Slow
Up	Up
Exit	Exit / Cancel / Clear
<<	<< / Tune-
Left	Left













 








 



 
















 
 








 





 











Original	Replacement
	 OK
	 Right
	 >> / Tune+
	 Down
	 Stop / Hold
	 Shift + CH+ /
	 Shift + 2
	 Shift + 3
	 Shift + 7
	 Shift + CH- /
	 Shift + 5
	 Shift + 6
	 Guide / EPG / -/--
	 Back / Return
	 Shift + Exit / Cancel / Clear
	 Subtitle / EQ
	 Sleep / Timer

Original	Replacement
	 Shift + 4
	 Audio / Lang I/II
	 Info / Angle
	 Smart / List





Original	Replacement
 Power	 Power
 Direct Tv Rec	 TV/Radio /
 Tv Aspect	 Zoom / Size
 Tv/Text	 Text / Goto
 1	 1
 2	 2
 Tracking/V-Lock+	 CH+ / Page+
 3	 3
 4	 4
 5	 5
 6	 6
 Tracking/V-Lock-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Volume+	 Vol+
 AV/Input Select	 AV / Input / RDS

Original	Replacement
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Volume-	 Vol-
 Search	 Red / Netflix / Search
 I<< Index	 I<< / Preset-
 Index >>I	 >>I / Preset+
 SV/V+	 Picture / Format
 Still Album	 Setup / OPT /
 Replay	 Display / Media
 Pause/Step	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Play	 Play / Slow
 Exit	 Exit / Cancel / Clear
 Up	 Up
 <<	 << / Tune-
 Left	 Left





Original	Replacement
	OK
	Right
	>> / Tune+
	Down
	Stop / Hold
	+ Shift + CH+ /
	+ Shift + 2
	+ Shift + 3
	+ Shift + 7
	+ Shift + CH- /
	+ Shift + 5
	+ Shift + 6
	Guide / EPG / -/--
	Back / Return
	+ Shift + Exit / Cancel / Clear
	Subtitle / EQ
	Sleep / Timer

Original	Replacement
	+ Shift + 4
	Audio / Lang I/II
	Info / Angle
	Smart / List





Original	Replacement
	Power
	Direct Tv Rec
	Tv Aspect
	Tv/Text
	AV/Input Select
	Volume+
	Tracking/V-Lock+
	Volume-
	Tracking/V-Lock-
	1
	2
	3
	4
	5
	6
	7
	8

Original	Replacement
	9
	Red
	Green
	Yellow
	Blue
	Bluetooth 9
	Guide / EPG / -/--
	0
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

