



Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Vol-		Vol-
	Power		Power		OK		OK
	1		1		Right		Right
	2		2		Vol+		Vol+
	3		3		Down		Down
	4		4		CH-		CH- / Page-
	5		5		Red		Red / Netflix / Search
	6		6		EPG		Guide / EPG / -/-
	7		7		Green		Green / APP / Repeat
	8		8		Audio		Audio / Lang I/II
	9		9		Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home		Subtitle		Subtitle / EQ
	0		0		Blue		Blue / Prime Video / Random
	Exit		Exit / Cancel / Clear		TTX		Text / Goto
	Up		Up		i		Info / Angle
	CH+		CH+ / Page+		FAV		Fav / Marker / PC
	Left		Left		Tv/Radio		TV/Radio /



Program



Original		Replacement		Original	Replacement
	Roll		Smart / List		
	Prog		Shift + TV/Radio / Program		
	Digest		Display / Media		
	Device		Picture / Format		
	Rec		Rec / Rec Mode		
	Zoom		Zoom / Size		
	Stop		Stop / Hold		
	Prev		l<< / Preset-		
	Next		>>  / Preset+		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	<<		<< / Tune-		
	>>		>> / Tune+		

