



	Original	Replacement		Original	Replacement
	DVD/USB	+ Shift + Display / Media		8	8
	Menu/PBC	Menu / Home		9	9
	Display	Display / Media		0	0
	Mute	Mute / Dimmer		Setup	Setup / OPT /
	P/N	Guide / EPG / -/--		Up	Up
	L/R	+ Shift + Fav / Marker / PC		Down	Down
	Angle	Info / Angle		Left	Left
	Language	Audio / Lang I/II		Right	Right
	Subtitle	Subtitle / EQ		Enter	OK
	Title	Sound / Title		Play	Play / Slow
	1	1		Slow	+ Shift + Play /
	2	2		Vol-	Vol-
	3	3		Stop	Stop / Hold
	4	4		Vol+	Vol+
	5	5		<<	<< / Tune-
	6	6		>>	>> / Tune+
	7	7		l<<	l<< / Preset-





Original		Replacement	
	>>		>> / Preset+
	Repeat		Green / APP / Repeat
	Mark		Fav / Marker / PC
	Goto		Text / Goto
	Zoom		Zoom / Size

Original		Replacement	

