

















 














 





 

 
 













	Original	Replacement		Original	Replacement	
		Mute		Mute / Dimmer		CH+ / Page+
		EPG		Guide / EPG / -/--		Up
		Info		Info / Angle		0
		DVB/AV		AV / Input / RDS		Audio / Lang I/II
		Pause		Pause / Step / Freeze		Vol-
		1		1		Left
		2		2		OK
		3		3		Vol+
		Fav		Fav / Marker / PC		Right
		4		4		Text / Goto
		5		5		Menu / Home
		6		6		CH- / Page-
		TV/Radio		TV/Radio /		Down
		7		7		Exit / Cancel / Clear
		8		8		Subtitle / EQ
		9		9		Red / Netflix / Search
		Recall		Back / Return		Red / Function
						Smart / List





Original	Replacement
 Green / Screen	 Green / APP / Repeat
 Green / Screen	 Display / Media
 Yellow / Speaker	 Sound / Title
 Yellow / Speaker	 Yellow / YouTube / Repeat
 Blue / Aspect	 Blue / Prime Video / Random
 Blue / Aspect	 Picture / Format

Original	Replacement

