





 

 

 

 

 

 





 

 

 

 



 



Original	Replacement
Open/Close	Eject / Surround
Sleep	Sleep / Timer
Clock	Shift + Sleep / Timer
Power	Power
Internet Radio	Display / Media
USB	Shift + 8
Music Servers	Audio / Lang I/II
Tuner	Shift + 6
Analog In	AV / Input / RDS
Optical In	D.Menu / Top
CD	Shift + 3
Bluetooth	Shift + 9
I<</CH-	I<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>I/CH+	>>I / Preset+
Speaker A/B	Yellow / YouTube / Repeat

Original	Replacement
Stop	Stop / Hold
Volume A/B	Red / Netflix / Search
ADD Favorites	CH+ / Page+
DBB/Tone	Subtitle / EQ
Volume+	Vol+
Call Favorites	CH- / Page-
Mute	Mute / Dimmer
Volume-	Vol-
Queue	Smart / List
Up/Tune+	Up
Option/Program	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Back	Back / Return
Down/Tune-	Down
Setup	Menu / Home





Original	Replacement	Original	Replacement
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Dimmer		Shift + Mute / Dimmer
	Info		Info / Angle

