


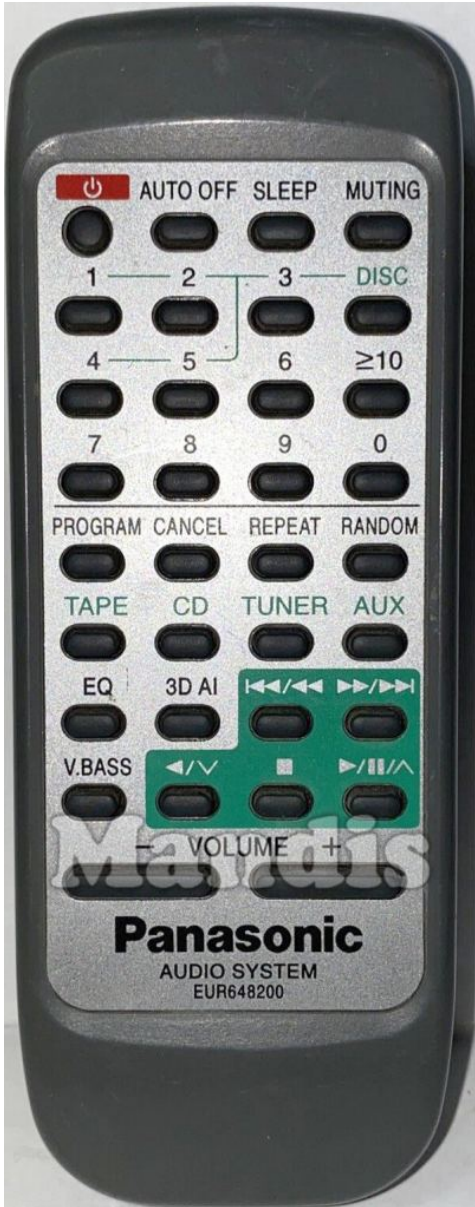

Original	Replacement	Original	Replacement
	Power		Power
	Auto Off	+	Shift + Power
	Sleep		Sleep / Timer
	Muting		Mute / Dimmer
	1		1
	2		2
	3		3
	Disc		Display / Media
	4		4
	5		5
	6		6
	+10		Guide / EPG / -/--
	7		7
	8		8
	9		9
	0		0
	Program		TV/Radio /
	Cancel		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	Tape	+	Shift + 5
	CD	+	Shift + 3
	Tuner	+	Shift + 6
	AUX	+	Shift + 7
	EQ		Subtitle / EQ
	3D AI		Smart / List
	<<		<< / Tune-
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	>>		>> / Tune+
	V.Bass		Sound / Title
	</▼		Left
	</▼		Down
	</▼		CH- / Page-



Program



	Original	Replacement		Original	Replacement
		Stop / Hold			
		Play / Slow			
		Right			
		Pause / Step / Freeze			
		Up			
		CH+ / Page+			
		Vol-			
		Vol+			

