



 


Original	Replacement
 Standby / On	 Power
 BD	 Shift + 9
 DVD	 Shift + 2
 SAT	 Shift + Fav / Marker / PC
 HDMI	 Shift + 0
 iPod / USB	 Shift + 8
 ADPT	 Shift + 4
 MHL	 Shift + Guide / EPG / -/-
 NETWORK	 Shift + 7
 TUNER	 Shift + 6
 TV	 Shift + 1
 CD	 Shift + 3
 INPUT PREV.	 CH- / Page-
 INPUT NEXT	 CH+ / Page+
 Volume+	 Vol+
 Volume-	 Vol-
 Status	 Shift + Info / Angle

Original	Replacement
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Top Menu	 D.Menu / Top
 Up	 Up
 Tools Menu	 Setup / OPT /
 Video P	 Picture / Format
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Auto	 Red / Netflix / Search
 Surr	 Green / APP / Repeat
 Adv	 Yellow / YouTube / Repeat
 CH LV	 Smart / List
 Pause	 Pause / Step / Freeze





Original	Replacement
 MPX	 Text / Goto
 BAND	 TV/Radio /
 Play	 Play / Slow
 PTY	 Info / Angle
 Stop	 Stop / Hold
 Preset -	 Shift + I<< / Preset-
 I<<	 I<< / Preset-
 Preset+	 Shift + >>I / Preset+
 >>I	 >>I / Preset+
 Tune-	 Shift + << /
 <<	 << / Tune-
 Tune+	 Shift + >> /
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 +Fav	 Fav / Marker / PC

Original	Replacement
 4	 4
 5	 5
 6	 6
 DISP	 Display / Media
 7	 7
 8	 8
 9	 9
 Repeat	 Shift + Green / APP /
 CH+	 Shift + CH+ /
 D.Access	 Exit / Cancel / Clear
 0	 0
 Class	 Shift + Exit / Cancel / Clear
 Shuffle	 Shift + Blue / Prime
 CH-	 Shift + CH- /
 Dimmer	 Shift + Mute / Dimmer
 Sleep	 Sleep / Timer

