







 











 
 
 



























 





















Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Input		AV / Input / RDS		Mute		Mute / Dimmer
	Up		Up		P-		CH- / Page-
	Left		Left		Netflix		Shift + Red / Netflix /
	OK		OK		prime video		Shift + Blue / Prime
	Right		Right		YouTube		Shift + Yellow / YouTube /
	Down		Down		www		Display / Media
	Back		Back / Return		1		1
	Home		Menu / Home		2		2
	:=		D.Menu / Top		3		3
	<<		<< / Tune-		4		4
	Play		Play / Slow		5		5
	Pause		Pause / Step / Freeze		6		6
	>>		>> / Tune+		7		7
	Vol+		Vol+		8		8
	(i)		Info / Angle		9		9
	P+		CH+ / Page+		TXT		Text / Goto



