



Original	Replacement
Power	Power
Power TV	Shift + Power
Vol + TV	Vol+
CH + TV	Shift + CH+ /
Select Drive	Smart / List
AV TV	Shift + AV / Input / RDS
CH - TV	Shift + CH- /
Vol - TV	Vol-
1	1
2	2
3	3
CH / Page +	CH+ / Page+
4	4
5	5
6	6
CH / Page -	CH- / Page-
7	7

Original	Replacement
8	8
9	9
ShowView	Picture / Format
*	Fav / Marker / PC
0	0
Input Select	AV / Input / RDS
Delete	Exit / Cancel / Clear
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow / Search	<< / Tune-
Slow / Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play / x1.3	Play / Slow
i	Info / Angle
Prog / Check	TV/Radio /
Guide	Guide / EPG / -/-



