









 






Original	Replacement
 Standby/On	 Power
 Open/Close	 Eject / Surround
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 DVD/USB	 AV / Input / RDS
 DVD/USB	 Shift + 8
 DVD/USB	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Clear	 Exit / Cancel / Clear
 Top Menu	 D.Menu / Top
 Menu	 Smart / List
 Menu	 Shift + Menu /
 Home Menu	 Menu / Home
 Return	 Back / Return
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 <</< /<	 << / Tune-
 Play	 Play / Slow
 >>/ >/ >	 >> / Tune+
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze





Original	Replacement
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Play Mode	 Guide / EPG / -/--
 Surround	 Shift + Eject / Surround
 Zoom	 Zoom / Size
 Display	 Display / Media

Original	Replacement

