 

 



 

 

 

 

 

 

 

 

 

 



 

 

 













 

 

 

 

 

 







 







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	PMode		Picture / Format
	SMode		Sound / Title
	I/II/Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Recall		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Auto		Setup / OPT /
	Display		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



