







 

 

 





| | Original | Replacement | Original | Replacement |
|---|----------------------|---|----------|-------------|
|  | Line 1 |  Power | | |
|  | Line2 |  Mute / Dimmer | | |
|  | Balanced |  Play / Slow | | |
|  | Tape1 |  Pause / Step / Freeze | | |
|  | Tape 2 |  Stop / Hold | | |
|  | Phono |  Rec / Rec Mode | | |
|  | Source Direct On/Off |  << / Tune- | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

