






















































































Original	Replacement	Original	Replacement
On/Off	 Power	Menu video	 D.Menu / Top
Mute	 Mute / Dimmer	Help	 Setup / OPT /
On/Tim	 Play / Slow	Text	 Text / Goto
Still	 Pause / Step / Freeze	TV/AV	 AV / Input / RDS
Off/Tim	 Stop / Hold	Menu	 Menu / Home
Tone-	 << / Tune-	Menu Up	 Up
Tone+	 >> / Tune+	Camera	 Info / Angle
Contrast-	 I<< / Preset-	Menu Left	 Left
Contrast+	 >>I / Preset+	OK Enter	 OK
Color- S.Std	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Clear	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Surround	 Eject / Surround	Swap	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	View	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-





Original	Replacement	Original	Replacement
Display	 Display / Media	Blue	 Blue / Prime Video / Random
Chan.Down	 CH- / Page-	On/Off	 Shift + Power
1	 1	Update	 Shift + Play /
2	 2	Game Coo	 Shift + Pause / Step /
3	 3	Camera1	 Shift + Stop /
4	 4	Nicam/Mono	 Shift + Audio / Lang I/II
5	 5	4.# 16:9	 Shift + Picture / Format
6	 6	Rotate Pip	 Shift + Up
7	 7	Level L	 Shift + Left
8	 8	On Pip	 Shift + OK
9	 9	Level R/Woofers	 Shift + Right
Guide -/-- 1.	 Guide / EPG / -/--	Dim Pip	 Shift + Down
0/10	 0	Back	 Shift + Back / Return
2.Fav P/C 2.	 Fav / Marker / PC	Audio+	 Shift + Vol+
Red	 Red / Netflix / Search	Bright+ Mode	 Shift + CH+ /
Green	 Green / APP / Repeat	Audio-	 Shift + Vol-
Yellow	 Yellow / YouTube / Repeat	Bright- Sys	 Shift + CH- /

Original	Replacement	Original	Replacement
Blue	 Blue / Prime Video / Random	On/Off	 Shift + Power
Update	 Shift + Play /	Game Coo	 Shift + Pause / Step /
Camera1	 Shift + Stop /	Nicam/Mono	 Shift + Audio / Lang I/II
4.# 16:9	 Shift + Picture / Format	Rotate Pip	 Shift + Up
Level L	 Shift + Left	On Pip	 Shift + OK
Level R/Woofers	 Shift + Right	Dim Pip	 Shift + Down
Back	 Shift + Back / Return	Audio+	 Shift + Vol+
Bright+ Mode	 Shift + CH+ /	Audio-	 Shift + Vol-
Bright- Sys	 Shift + CH- /		

Page-



Original	Replacement	Original	Replacement
3.*	 +  Shift + 3		

