
 









 
 
 
 




Original	Replacement	Original	Replacement
	Green / APP / Repeat		Down
	Power		CH- / Page-
	Yellow / YouTube / Repeat		Menu / Home
	Red / Netflix / Search		OK
	Blue / Prime Video / Random		Smart / List
	<< / Tune-		1
	>> / Tune+		2
	<< / Preset-		3
	>>  / Preset+		4
	TV/Radio /		5
	Display / Media		6
	Up		7
	CH+ / Page+		8
	Left		9
	Vol-		Fav / Marker / PC
	Right		0
	Vol+		Mute / Dimmer

