






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 Guide / EPG / -/--
 Recall	 Back / Return
 Picture	 Picture / Format
 Sound	 Sound / Title
 Aspect	 Zoom / Size

Original	Replacement
 Vol+	 Vol+
 Home/Android	 Shift + Menu /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mouse	 Display / Media
 CH-	 CH- / Page-
 O) I/II/Audio	 Audio / Lang I/II
 Smart	 Smart / List
 EPG	 Shift + Guide / EPG / -/--
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Original	Replacement
	Info / Angle
	Red / Netflix / Search
	<< / Tune-
	Green / APP / Repeat
	>> / Tune+
	Yellow / YouTube / Repeat
	I<< / Preset-
	Blue / Prime Video / Random
	>>I / Preset+
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	Text / Goto
	Setup / OPT /
	D.Menu / Top
	Sleep / Timer

Original	Replacement
	Eject / Surround
	TV/Radio /
	Fav / Marker / PC
	Subtitle / EQ
	Shift + Smart / List

