



Original	Replacement
	Sleep / Timer
	Power
	Subtitle / EQ
	Setup / OPT /
	Display / Media
	0
	8
	7
	9
	Picture / Format
	Audio / Lang I/II
	TV/Radio /
	CH- / Page-
	CH+ / Page+
	Up
	Left
	Play / Slow

Original	Replacement
	Pause / Step / Freeze
	OK
	Right
	Down
	Vol-
	Mute / Dimmer
	Vol+

