





	Original	Replacement		Original	Replacement
	Up		Up		
	Left		Left		
	OK		OK		
	Right		Right		
	Down		Down		
	Home		Menu / Home		
	Back		Back / Return		
	Vol+		Vol+		
	[■]		Setup / OPT /		
	Vol-		Vol-		
	Power		Power		

