

 



 



 

 



 







 






 



 


 





 
 
 

 

 



 





 
 





| Original | Replacement | Original | Replacement |
|--|--|--|---|
|  Power |  Power |  0 |  0 |
|  Setup |  Setup / OPT / |  +10 |  Guide / EPG / -/- |
|  Digest |  Smart / List |  Clear |  Exit / Cancel / Clear |
|  Lang |  Shift + Audio / Lang I/II |  Play |  Play / Slow |
|  Display |  Display / Media |  Up |  Up |
|  1 |  1 |  Stop |  Stop / Hold |
|  2 |  2 |  Left |  Left |
|  3 |  3 |  Select |  OK |
|  Zoom |  Zoom / Size |  Right |  Right |
|  4 |  4 |  Pause/Step |  Pause / Step / Freeze |
|  5 |  5 |  Down |  Down |
|  6 |  6 |  Slow |  Shift + Play / |
|  A-B Repeat |  Yellow / YouTube / Repeat |  F.BWD |  << / Tune- |
|  7 |  7 |  F.FWD |  >> / Tune+ |
|  8 |  8 |  Prev. |  I<< / Preset- |
|  9 |  9 |  Next |  >>I / Preset+ |
|  1/All Repeat |  Green / APP / Repeat |  Subtitle |  Subtitle / EQ |

| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Power |  DIMMER MUTE |  SHIFT | |
|  TV |  DVD |  SAT |  AUX |
|  SLOW |  STEP - FREEZE |  HOLD |  REC MODE |
|  TUNE- |  TUNE+ |  PRESET- |  PRESET+ |
|  TITLE |  LANG I/II |  EQ |  SURROUND |
|  SOUND |  AUDIO |  SUBTITLE |  PROGRAM |
|  FORMAT |  ZOOM |  SLEEP |  TV RADIO |
|  PICTURE |  OPT-TOOLS |  GOTO |  RDS |
|  TOP MENU |  D.MENU |  SETUP |  AV INPUT |
|  HOME |  ANGLE |  MENU |  INFO |
|  CLEAR |  EXIT |  CANCEL |  RETURN |
|  OK |  LIST |  SMART |  CH PAGE |
|  VOL + |  MEDIA |  DISPLAY |  TV |
|  VOL - |  TUNER |  CD - STB |  DVD |
|  1 |  VIDEO |  TAPE |  TUNER |
|  2 |  AUX - HDD |  USB |  BLUETOOTH |
|  3 |  7 |  8 |  9 |
|  4 |  GUIDE EPG |  HDMI - BAT |  FC |
|  5 |  NETFLIX |  APP |  YouTube |
| 6 | REPEAT | REPEAT A-B | Prime Video |
| 7 | SEARCH | RANDOM | |
| 8 | Mandis SHOP | www.mandis.tv | |



