





















 



 







Original	Replacement
 Setup	 Setup / OPT /
 Standby/On	 Power
 BD/DVD	 Shift + 2
 SAT/CBL	 Shift + 4
 AUX	 Shift + 7
 Game	 Shift + 5
 TV	 Shift + 1
 SACD/CD	 Shift + 3
 Phono	 Shift + 0
 Tuner	 Shift + 6
 Net	 Shift + Guide / EPG / -/-
 Bluetooth	 Shift + 9
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow

Original	Replacement
 >>	 >> / Tune+
 Repeat	 Green / APP / Repeat
 Stop	 Stop / Hold
 Random	 Blue / Prime Video / Random
 Speakers A/B	 Sound / Title
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 CH+	 CH+ / Page+
 Volume+	 Vol+
 Audio	 Audio / Lang I/II
 CH-	 CH- / Page-
 Volume-	 Vol-





	Original	Replacement	Original	Replacement
	 Mute	 Mute / Dimmer		
	 1	 1		
	 2	 2		
	 3	 3		
	 4	 4		
	 5	 5		
	 6	 6		
	 7	 7		
	 8	 8		
	 9	 9		
	 >10/Caps/D.Acce	 Guide / EPG / -/--		
	 0	 0		
	 Display	 Display / Media		
	 Dimmer	 Shift + Mute / Dimmer		
	 Sleep	 Exit / Cancel / Clear		

