



Original	Replacement
PTY	Smart / List
RDS/Display	Display / Media
Stereo/Mono	Audio / Lang I/II
Power	Power
Intro	Fav / Marker / PC
Random	Blue / Prime Video / Random
Repeat	Green / APP / Repeat
Timer Set	Menu / Home
1	1
2	2
3	3
Timer On/Off	Guide / EPG / -/--
4	4
5	5
6	6
Sleep	Sleep / Timer
7	7

Original	Replacement
8	8
9	9
EQ/X-Bass	Setup / OPT /
0	0
Program	TV/Radio /
File Search	Red / Netflix / Search
Mute	Mute / Dimmer
Left	Left
I<</Search Skip/Tuning -	I<< / Preset-
Up	Up
Volume Up	Vol+
Enter	OK
>>I/Search Skip/Tuning +	>>I / Preset+
Right	Right
Volume Down	Vol-
Down	Down
Tuner/Band/US	Shift + 6



