





 







 




 


 





 



 


 








Original	Replacement	Original	Replacement
I<<	 I<< / Preset-		 Green / APP / Repeat
>>I	 >>I / Preset+		 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS		 Blue / Prime Video / Random
 Power	 Power	 1	 1
 World	 Display / Media	 2	 2
 Netflix	 Shift + Red / Netflix /	 3	 3
 YouTube	 Shift + Yellow / YouTube /	 4	 4
 Music-Photo-Movi	 Setup / OPT /	 5	 5
 Rec	 Rec / Rec Mode	 6	 6
 Play	 Play / Slow	 7	 7
 Pause	 Pause / Step / Freeze	 8	 8
 Stop	 Stop / Hold	 9	 9
 Lang.	 Audio / Lang I/II	 Tv	 TV/Radio /
 <<	 << / Tune-	 0	 0
 >>	 >> / Tune+		 Zoom / Size
 Subtitle	 Subtitle / EQ	 Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Q.Menu	 D.Menu / Top



