





 














Original	Replacement
	Mute / Dimmer
	Shift + Pause / Step /
	Audio / Lang I/II
	Power
	Smart / List
	Sleep / Timer
	Picture / Format
	Display / Media
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Replacement
	AV / Input / RDS
	0
	Back / Return
	Setup / OPT /
	Sound / Title
	Up
	CH+ / Page+
	Vol-
	Left
	Menu / Home
	OK
	Right
	Vol+
	CH- / Page-
	Down
	Text / Goto
	Subtitle / EQ





Original	Replacement	Original	Replacement
	[ /= ] PROGRAM TV/RADIO		TV/Radio /
	<</[...] TUNE-		<< / Tune-
	>>/[?] TUNE+		>> / Tune+
	[X] PC FAV MARKER		Fav / Marker / PC
	Red/↑ CH.LIST		Red / Netflix / Search
	Green/← APP REPEAT		Green / APP / Repeat
	Yellow/→ YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue/Enter/H.Lock H.LOCK RANDOM		Blue / Prime Video / Random
	White/↓/CH.List CH.LIST GUIDE EPG		Guide / EPG / -/--
	Pause/Timer TIMER STEP-FREEZE		Pause / Step / Freeze
	[♦]/Zoom ZOOM SIZE ZOOM		Zoom / Size
	Exit EXIT CANCEL		Exit / Cancel / Clear

