





 



















Original		Replacement		Original		Replacement	
	Power		Power		Mute		Mute / Dimmer
	[≡?]/Info		Info / Angle		Vol-		Vol-
	Source		AV / Input / RDS		P-		CH- / Page-
	1		1		Menu		Menu / Home
	2		2		Exit		Exit / Cancel / Clear
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	7		7		Down		Down
	8		8		Red-/[-]/P.Mode		Red / Netflix / Search
	9		9		Red-/[-]/P.Mode		Picture / Format
	-/--/[≡+]		Guide / EPG / -/--		Green-/[-]/S.Mode		Green / APP / Repeat
	0		0		Green-/[-]/S.Mode		Sound / Title
	PRE-CH		Back / Return		Yellow/[▼]/Still		Yellow / YouTube / Repeat
	Vol+		Vol+		Yellow/[▼]/Still		Pause / Step / Freeze
	P+		CH+ / Page+		Blue/[<>]/Size		Shift + Zoom / Size





Original	Replacement	Original	Replacement
 Blue/[<>]/Size	 Blue / Prime Video / Random		
 PIP Source	 Display / Media		
 [=]/Text	 Text / Goto		
 [=o]/Dual I-II	 Audio / Lang I/II		
 [=◇]/Sleep	 Sleep / Timer		
 PIP	 Smart / List		
 Auto	 D.Menu / Top		

