 

 

 









 

 



 

 















 



 

 

 

 

 

 

 

 

 

 

 









Original	Replacement		
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	CC		Subtitle / EQ
	[<>]/Format		Picture / Format
	Sleep		Sleep / Timer
	Options		Setup / OPT /
	Source		AV / Input / RDS
	Home		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK

Original	Replacement		
	Right		Right
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SAP		Guide / EPG / -/-



