


 























Original	Replacement
 Power	 Power
 D. Set up / Index	 D. Menu / Top
 Mute	 Mute / Dimmer
 Play / Hold	 Play / Slow
 Pause / Hold	 Pause / Step / Freeze
 Stop / Mix	 Stop / Hold
 << Cancel	 << / Tune-
 >> Size	 >> / Tune+
 I << / Reveal	 I << / Preset-
 >> / Subpage	 >> / Preset+
 S. Mode	 Sound / Title
 Subtitle	 Subtitle / EQ
 P. Mode	 Picture / Format
 Sleep	 Sleep / Timer
 Audio / Nicam	 Set up / OPT /
 D. Menu / Text	 Text / Got o
 Input	 AV / Input / RDS

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Ok	 Ok
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Vol +	 Vol +
 Eject / Auto	 Smart / List
 Ch+	 Ch+ / Page+
 Vol -	 Vol -
 Display	 Display / Media
 Ch-	 Ch- / Page-
 1	 1
 2	 2
 3	 3



