



Original	Replacement
Power	Power
Mute	Mute / Dimmer
Band/Tuner	Smart / List
Timer/Clock	Shift + Sleep / Timer
Timer On/Off	Shift + Power
AUX	7
Program/Set	Menu / Home
MO/ST/ Rep.A-B	Shift + Smart / List
Sleep	Sleep / Timer
EQ/S.Bass	Audio / Lang I/II
SRS Wow	AV / Input / RDS
Rec/Pause	Rec / Rec Mode
Random	Blue / Prime Video / Random
Counter Reset	Exit / Cancel / Clear
I<< CD	I<< / Preset-
Stop CD	Stop / Hold
Play/Pause CD	Play / Slow

Original	Replacement
>>I CD	>>I / Preset+
+10/Tuning	Guide / EPG / -/-
Tuning/Album+	CH+ / Page+
Vol+	Vol+
Repeat	Green / APP / Repeat
Tuning/Album-	CH- / Page-
Vol-	Vol-
<< Tape	<< / Tune-
Stop Tape	Shift + Stop /
<> Tape	D.Menu / Top
>> Tape	>> / Tune+

