

 



 







 
 
 

 







 

 








 



 

 



 







 










Original		Replacement		Original		Replacement	
	Power		Power		[≡]/TTX/MIX		Text / Goto
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Play		Play / Slow		[≡i]/Menu		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop		Stop / Hold		[≡?]/Info		Info / Angle
	<<		<< / Tune-		Left		Left
	>>		>> / Tune+		Enter		OK
	P Down		I<< / Preset-		Right		Right
	P Up		>>I / Preset+		[≡x]/Exit		Exit / Cancel / Clear
	I-II Dual		Audio / Lang I/II		Down		Down
	(O)/SRS		Subtitle / EQ		PRE-CH		Back / Return
	[≡◇]		Picture / Format		Vol+		Vol+
	[≡+] / PIP		Zoom / Size		CH MGR		Smart / List
	Sleep		Sleep / Timer		P+		CH+ / Page+
	TV		TV/Radio /		Vol-		Vol-
	[□] / Position		D.Menu / Top		P-		CH- / Page-
	E.Saving		Setup / OPT /		1		1



