 

 

 

 

 




 
 

 

 



 

 


 



 
 
 

 
 
 
 
 
 
 







Original	Replacement
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Replacement
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List/Repeat	 Smart / List
 Vol-	 Vol-
 ♥/Title	 Fav / Marker / PC
 Sleep/Menu	 Sleep / Timer
 EPG/Setup	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-





Original	Replacement	Original	Replacement
	Green / APP / Repeat		
	>> / Tune+		
	Yellow / YouTube / Repeat		
	l<< / Preset-		
	Blue / Prime Video / Random		
	>> / Preset+		
	Text / Goto		
	Play / Slow		
	Pause / Step / Freeze		
	Picture / Format		
	Stop / Hold		
	TV/Radio /		
	Zoom / Size		
	Setup / OPT /		
	Subtitle / EQ		
	D.Menu / Top		
	Rec / Rec Mode		

