 

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 







Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 [V]	 Shift + Smart / List
 [ <> ]	 Picture / Format
 Subtitle	 Subtitle / EQ
 O)I/II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0

Original	Replacement
 List	 Smart / List
 Vol+	 Vol+
 [≡i]/[i+]	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Text	 Text / Goto
 Quick	 Display / Media
 Up	 Up
 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Left	 Left
 OK	 OK
 Play	 Play / Slow
 Right	 Right





Original	Replacement	Original	Replacement
 >>	 >> / Tune+		
 Menu	 Menu / Home		
 Stop	 Stop / Hold		
 Down	 Down		
 Return	 Shift + Back / Return		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [≡?]	 Guide / EPG / -/--		
 I<<	 I<< / Preset-		
 [≡◇]	 Zoom / Size		
 [≡+]	 Shift + Display / Media		
 >>	 >>  / Preset+		
 [O]/[≡x]	 Setup / OPT /		

