










 







 

 

 





 

 













Original	Replacement	Original	Replacement
Standby/On	Power	Up/PTY Select	Up
Sleep	Sleep / Timer	P.Scan	Smart / List
Video 1	Shift + 4	Left/EON TA	Left
Video 2	Shift + 8	Enter/RDS	OK
Video 3	Shift + 9	Right/EON PTY	Right
EXT In	Shift + 2	Repeat 1/All	Green / APP / Repeat
Tuner	Shift + 6	Down/Search	Down
CD	Shift + 3	Dimmer	Shift + Mute / Dimmer
AUX	Shift + 7	<<	<< / Tune-
Tape	Shift + 5	>>	>> / Tune+
Level+	CH+ / Page+	I<<	I<< / Preset-
CH Sel	Fav / Marker / PC	Stop	Stop / Hold
Volume+	Vol+	>>I	>>I / Preset+
Level-	CH- / Page-	Pause	Pause / Step / Freeze
Muting	Mute / Dimmer	Play	Play / Slow
Volume-	Vol-	Auto	D.Menu / Top
T.Tone	Display / Media	< DSP	Shift + Left





	Original	Replacement		Original	Replacement
	DSP >	 +  Shift + Right		Dynamic Range	 Eject / Surround
	Stereo	 AUDIO Audio / Lang I/II		PAL/NTSC	 Picture / Format
	SP Setup	 SETUP Setup / OPT /			
	< Select	 +  Shift + << /			
	Select >	 +  Shift + >> /			
	Parameter	 SEARCH Red / Netflix / Search			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	0	 0			
	Cinema EQ	 SUBTITLE Subtitle / EQ			

