



Original	Replacement
Standby/On	Power
Standby/On Tv	Shift + Power
Mute Tv	Mute / Dimmer
Child Lock	TV/Radio /
Monitor	AV / Input / RDS
Eject	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Turbo Timer	Display / Media
0	0

Original	Replacement
Timer	Sleep / Timer
Menu	Menu / Home
Up/P+	Up
P+ Tv	CH+ / Page+
OK	OK
Left/Vol-	Left
Vol- Tv	Vol-
Right/Vol+	Right
Vol+ Tv	Vol+
Select	D.Menu / Top
Down/P-	Down
P- Tv	CH- / Page-
Clear	Exit / Cancel / Clear
Play	Play / Slow
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+



