 

 

 




























Original	Replacement
 Power	 Power
 USB	 Shift + 8
 TTX	 Text / Goto
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Fav	 Fav / Marker / PC
 I<<	 I<< / Preset-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Red / TV/Radio	 Red / Netflix / Search
 Red / TV/Radio	 TV/Radio /
 Green / Media	 Green / APP / Repeat
 Green / Media	 Display / Media
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue / Timer	 Blue / Prime Video / Random
 Blue / Timer	 Sleep / Timer
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/--
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Info	 Info / Angle
 CH-	 CH- / Page-





	Original	Replacement	Original	Replacement
1,..@	1	TV 1		
2 abc	2	DVD 2		
3 def	3	CD - STB 3		
4 ghi	4	VIDEO 4		
5 jkl	5	TAPE 5		
6 mno	6	TUNER 6		
7 pqrs	7	AUX - HDD 7		
8 tuv	8	USB 8		
9 wxyz	9	BLUETOOTH 9		
AUDIO	Audio	LANG I/II AUDIO		
0	0	HDMI - BAT 0		
SUBTITLE	Subtitle	EQ SUBTITLE		

