

 

 



 

 



 

 

 

 

 

 

 



















 




 


Original	Replacement
	 Power
	 Audio / Lang I/II
	 Mute / Dimmer
	 TV/Radio /
	 Subtitle / EQ
	 Guide / EPG / -/--
	 Text / Goto
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Fav / Marker / PC

Original	Replacement
	 0
	 Back / Return
	 Menu / Home
	 Exit / Cancel / Clear
	 Up
	 CH+ / Page+
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Info / Angle
	 CH- / Page-
	 Down
	 Smart / List
	 Display / Media
	 Shift + 8





Original	Replacement	Original	Replacement
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	I<<		I<< / Preset-
	Yellow		Yellow / YouTube / Repeat
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Green		Green / APP / Repeat
	<<		<< / Tune-
	>>		>> / Tune+
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode

